




### Change Selected Food Item:

STEP 1: Select desired meal time: press/hold/select **Meal**  and verify your selection on the meal indicator 

STEP 2: Select Program: press/hold **Prog** 


STEP 3: Select the bin: push **SBin** 

STEP 4: Select food item: push **Up/Down** 


STEP 5: Save your selection: press/hold **Prog** 

### Change Temperature Setting for Food Item:

STEP 1: Select Program: press/hold **Prog**  and wait for beep. (Repeat this step)

STEP 2: Select food item: push **Up/Down** 


STEP 3: Select Temperature: push **Temp** 

STEP 4: Set temperature setting: push +/- 


STEP 5: Save your selection: press/hold **Prog** 

### Change Dump Time for Food Item:

STEP 1: Select Program: press/hold **Prog**  and wait for beep. (Repeat this step)

STEP 2: Select food item: push **Up/Down** 


STEP 3: Select Time: push **Time**  2X (Verify that "Dump Time" is flashing)

STEP 4: Set Dump Time setting: push +/- 


STEP 5: Save your selection: press/hold **Prog** 


### Change Cook Time for Food Item:

STEP 1: Select Program: press/hold **Prog**  and wait for beep. (Repeat this step)

STEP 2: Select food item: **Up/Down** 


STEP 3: Select Time: push **Time**  2X (Verify that "Cook Time" is flashing)

STEP 4: Set Cook Time setting: push +/- 


STEP 5: Save your selection: press/hold **Prog** 


### Change Food Item Name:


STEP 1: Select Program: press/hold **Prog**  and wait for beep. (Repeat this step)


STEP 2: Select food item: push +/- 

STEP 3: Select the bin (under displayed food item to be changed): push **SBin** 

STEP 4: Select letter (Toggle): push **L/R** 

STEP 5: Change letter: push +/- 

STEP 6: Move to next letter (toggle): push **L/R** 

STEP 7: Save your selection: press/hold **Prog** 

**Quick Escape:** Push **Meal**  to return to normal operating mode

### Set to French or English Menu Presets:

STEP 1: Turn Hot Hold™ off

STEP 2: Select either **Upper Left SBin**  for English presets or **Upper Right SBin**  for French presets

STEP 3: Press/Hold selected **SBin**  and turn Hot Hold™ on

STEP 4: Four (4) beeps and confirm saved setting